Grease Guardian®
Sustainable Grease Management

Specification

CGST2 Mini Coffee Guardian

SIDE VIEW

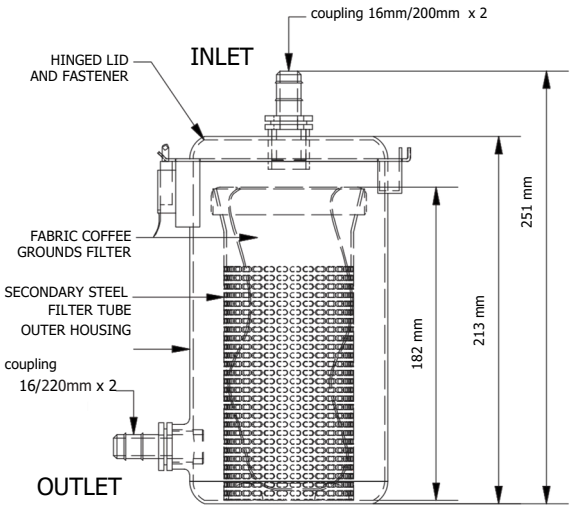

TOP VIEW

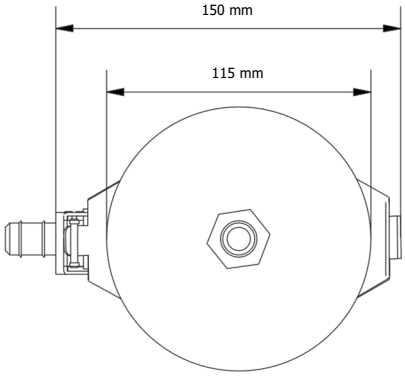

PRODUCT CHARACTERISTICS			
	HOUSING	FABRIC FILTER	METAL FILTER
MATERIAL	STAINLESS STEEL, 16 GAUGE	ELASTHAN	STAINLESS STEEL 16 GAUGE
CAPACITY	1.78 LITRES	600ml	600ml

INSTALLATION ADVICE

CGST2 MINI SYSTEM SHOULD BE POSITIONED IN THE CABINET BENEATH THE COFFEE MACHINE USING BRACKET PROVIDED. OBSERVE THE FOLLOWING:

POSTIONING:
- ENSURE CLEARANCE IS PROVIDED FOR OPENING OF HINGED LID AS INDICATED HERE.
- ENSURE SYSTEM IS PLACED CLOSE TO THE FRONT OF CABINET FOR EASY INSPECTION AND ACCESS.

USE THE EXISTING COFFEE MAHINES FLEXIBLE WASTE HOSE TO CONNECT THE ST2 MINI INLET TO THE COFFEE MACHINE WASTE OUTLET ABOVE. SIMILARLY CONNECT THE ST 2 MINI OUTLET TO FLOOR WASTEPOINT.

ENSURE A GRAVITY FALL IS MAINTAINED FROM THE ST2 MINI OUTLET TO DRAIN

THIS SYSTEM INCLUDES BOTH 16 AND 20 mm HOSECONNECTORS FOR MOST CONNECTION TYPES

MAINTENANCE NOTES:

FABRIC FILTER CAN BE REPLACED REGULARLY WITHOUT NEED TO REMOVE THE INTERNAL STEEL FILTER

TO PERIODICALLY REMOVE AND CHECK THE SECONDARY STEEL FILTER, OR TO CLEAN INSIDE THE MAIN HOUSING, THE ST2 MINI UNIT CAN BE COMPLETELY UNCLIPPED FROM THE WALL BRACKET SHOWN.

TYPICAL INSTALLATION

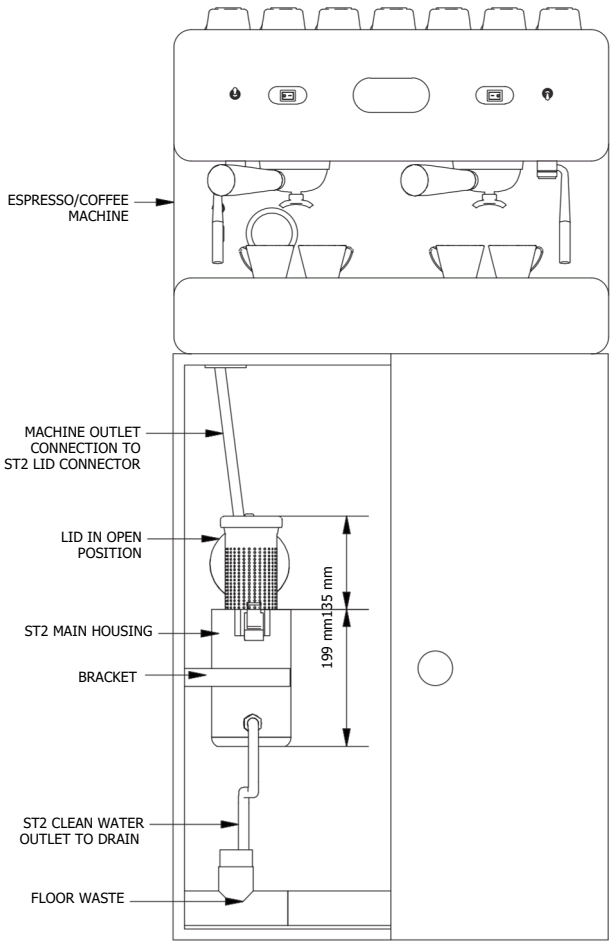

Copyright January 2024 FM Environmental Ltd. All Rights Reserved. Specification subject to change without notice

Grease Guardian®
Sustainable Grease Management

Specification

CGST2 Coffee Guardian

SIDE VIEW

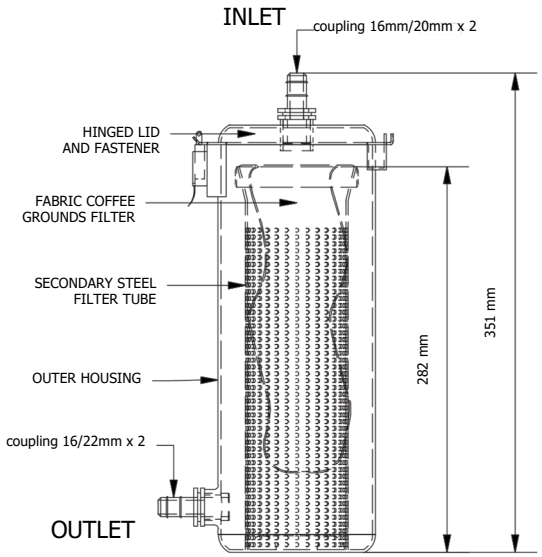

TOP VIEW

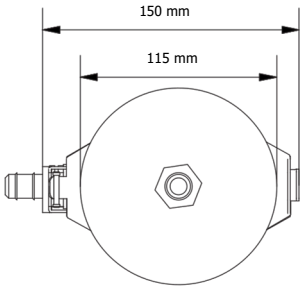

PRODUCT CHARACTERISTICS			
	HOUSING	FABRIC FILTER	METAL FILTER
MATERIAL	STAINLESS STEEL, 16 GAUGE	ELASTHAN	STAINLESS STEEL 16 GAUGE
CAPACITY	2.7 LITRES	1 LITRE	1 LITRE

INSTALLATION ADVICE

ST2 SYSTEM SHOULD BE POSITIONED IN THE CABINET BENEATH THE COFFEE MACHINE USING TWO BRACKETS PROVIDED. OBSERVE THE FOLLOWING:

POSTIONING:
- ENSURE CLEARANCE IS PROVIDED FOR OPENING OF HINGED LID AS INDICATED HERE.
- ENSURE SYSTEM IS PLACED CLOSE TO THE FRONT OF CABINET FOR EASY INSPECTION AND ACCESS.

USE THE EXISTING COFFEE MAHINES FLEXIBLE WASTE HOSE TO CONNECT THE ST2 INLET TO THE COFFEE MACHINE WASTE OUTLET ABOVE. SIMILARLY CONNECT THE ST 2 OUTLET TO FLOOR WASTEPOINT.

ENSURE A GRAVITY FALL IS MAINTAINED FROM THE ST2 OUTLET TO DRAIN

THIS SYSTEM INCLUDES BOTH 16 AND 20mm HOSECONNECTORS FOR MOST CONNECTION TYPES

MAINTENANCE NOTES:

FABRIC FILTER CAN BE REPLACED REGULARLY WITHOUT NEED TO REMOVE THE INTERNAL STEEL FILTER

TO PERIODICALLY REMOVE AND CHECK THE SECONDARY STEEL FILTER, OR TO CLEAN INSIDE THE MAIN HOUSING, THE ST2 UNIT CAN BE COMPLETELY UNCLIPPED FROM THE TWO WALL BRACKETS SHOWN.
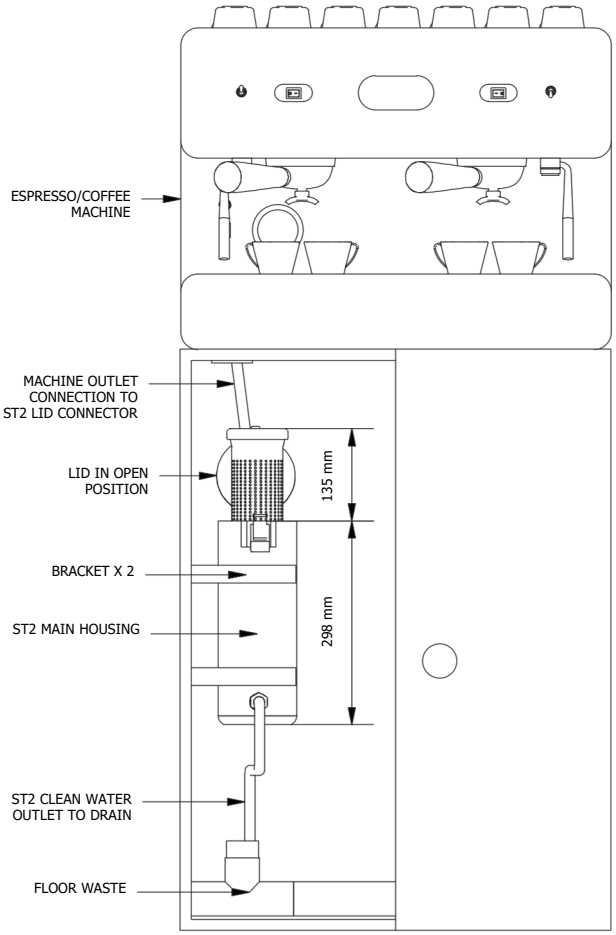
TYPICAL INSTALLATION